

# SP PRO Interactive Inverter Charger Technical Note



## SP PRO Firmware Update Procedure

### Introduction

This procedure provides instructions for updating the SP PRO operating program or Firmware. This only needs to be performed if you have been specifically requested to update the firmware. The firmware is updated using SP LINK and can be updated either on-site or remotely.

### Requirements

SP LINK 2.0 or later versions  
Firmware file for your SP PRO model

*Note: SP LINK and firmware are available from <http://www.spro.com.au/splink.htm>*

### STATE OF CHARGE (SoC)

The SP PRO defaults to 85% SoC after every restart or reset. The SP PRO must reset to use new firmware after the update. It is a good idea to record the SoC so that after the reset, the SoC can be adjusted back using the Reset SoC function in Service Settings.


### Firmware Update Procedure

Start SP LINK and connect to the SP PRO.


*Note: This procedure cannot be performed via QuickStart.*

Take note of the Model (in this example SPMC482-AU). The model is included in the Firmware file name.

### Select File – Firmware Update

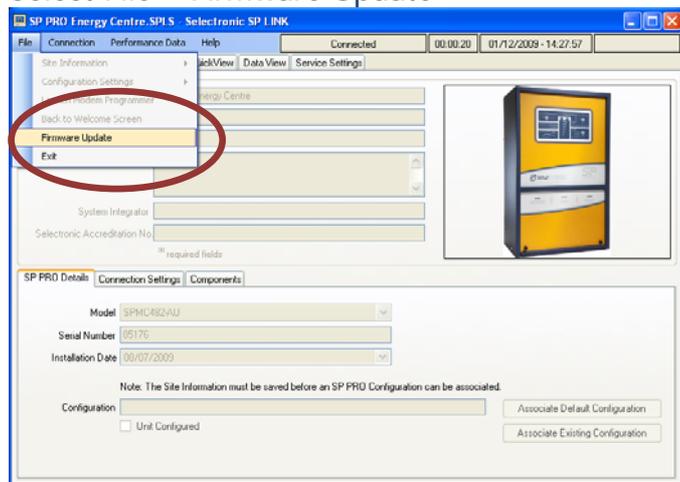

The SP PRO Firmware Update window will appear and show the Current SP PRO Firmware Information.

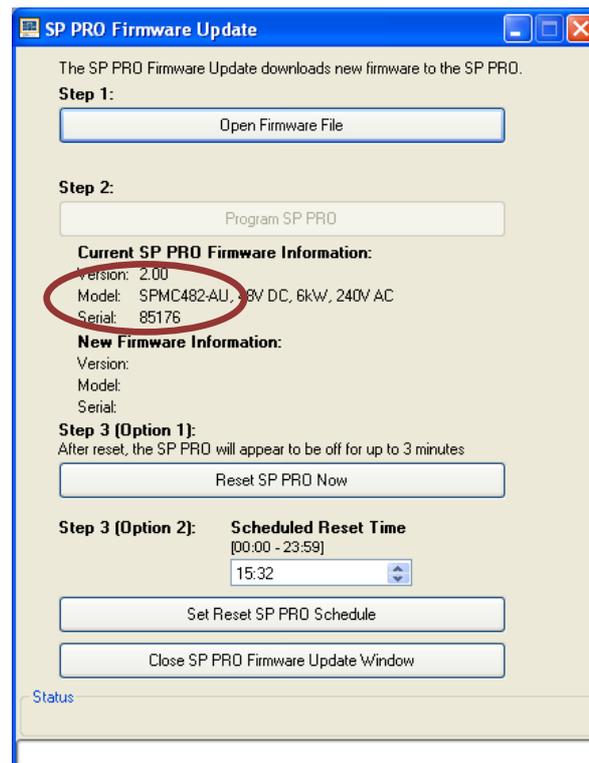

# SP PRO Interactive Inverter Charger Technical Note




## STEP 1


- Click on Open Firmware File



- Select appropriate Firmware (.bin) file for your model (in this example SPMC482\_AU\_V2\_00.bin).

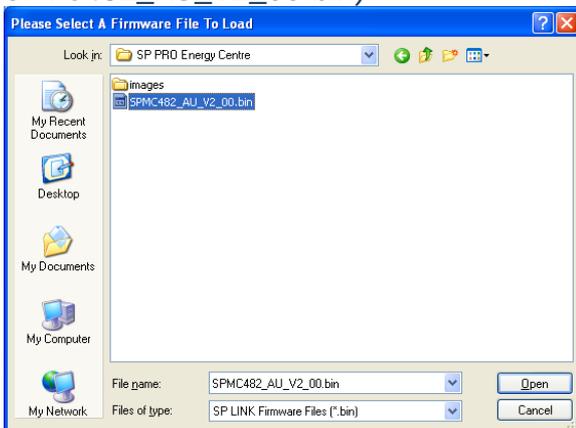


- Click Open. The Firmware details will be displayed.

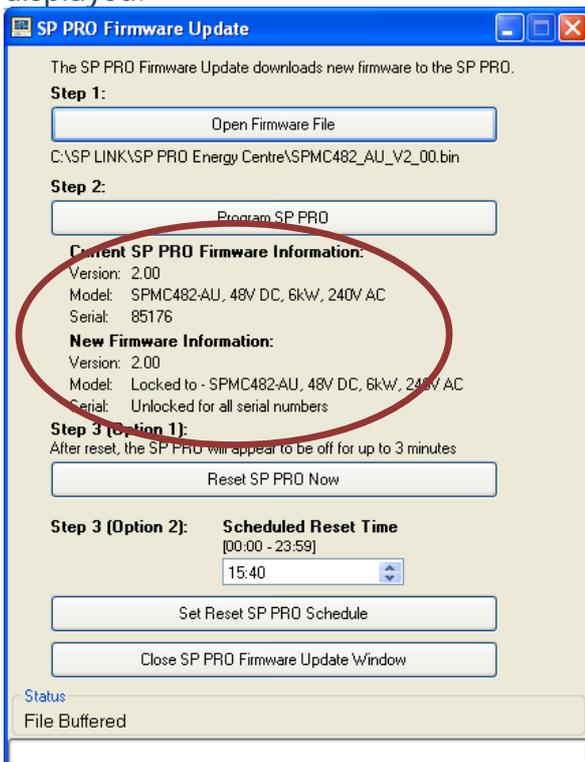

## WARNING: AC LOAD INTERRUPTION

If Step 2 button indicates 'Reset and Program SP PRO, AC Load will be interrupted immediately on button press.

If this is the message you are seeing then follow the instructions 'STEP 2 – RESET AND PROGRAM SP PRO'.

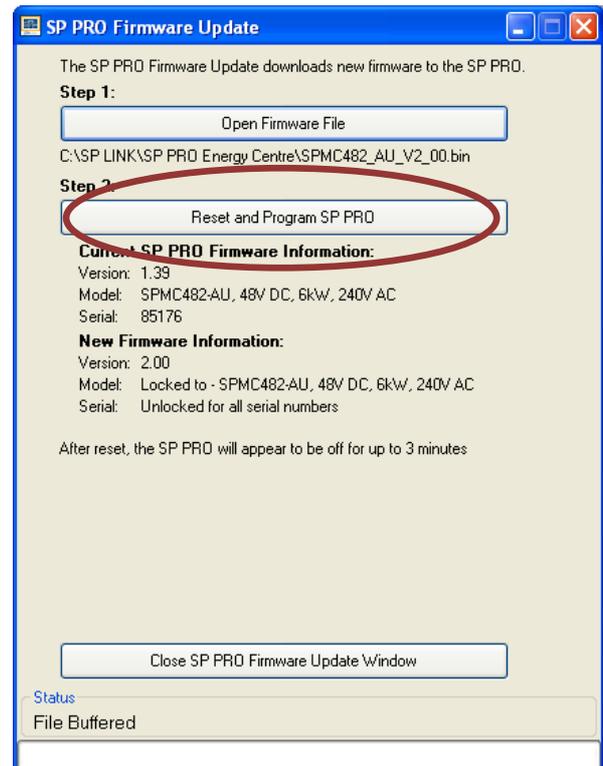

This will occur with Firmware versions before 1.53. These versions can only be updated on site.

## STEP 2 – RESET AND PROGRAM SP PRO

- Click on Reset and Program SP PRO.

SP LINK will reset SP PRO, indicate Busy while updating firmware and then indicate Complete.

- Click Close SP PRO Firmware Update Window.

SP PRO will appear off for a further 3 minutes and revert to Idle mode.

Firmware Update is now complete.

# SP PRO Interactive Inverter Charger Technical Note




If following Step 1, you are seeing the message 'Program SP PRO', please complete 'STEP 2 –PROGRAM SP PRO' and 'STEP 3'.

## STEP 2 - PROGRAM SP PRO

- Click on Program SP PRO

SP LINK will now begin the update process. There are several stages and this can be monitored in the Status area.

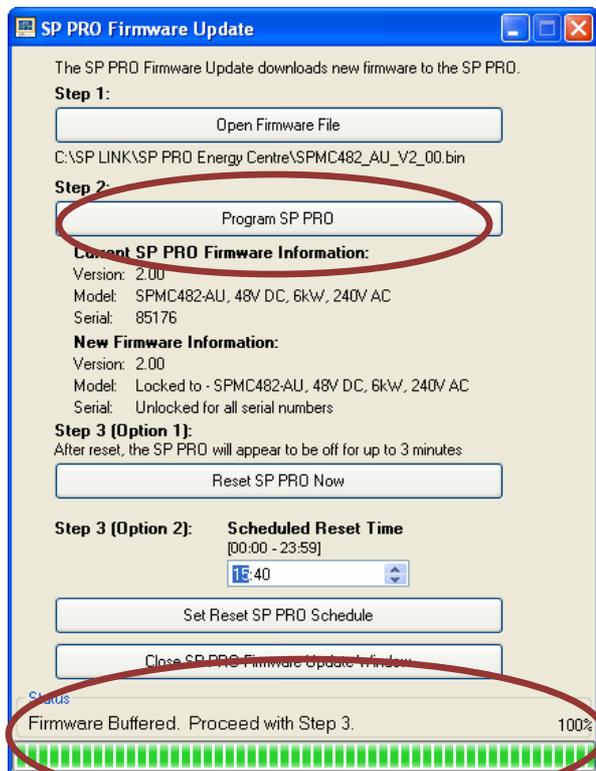

When complete 'Status' will indicate 'Firmware Buffered. Proceed with Step 3.'

## Additional Information

SP PRO web site – <http://www.sppro.com.au> or contact the Selectronic Sales Team.

## STEP 3

### WARNING: AC LOAD INTERRUPTION

The SP PRO must be reset to complete the firmware update. During the reset AC LOAD will be interrupted. There are two options:

### Option 1 – Immediate Reset

- Click Reset SP PRO Now

The SP PRO will reset.

- Click Close SP PRO Firmware Update Window.

SP PRO will appear off for a further 3 minutes and revert to Idle mode.

Firmware Update is now complete.

### Option 2 – Scheduled Time Reset

- Enter a time into Scheduled Reset Time  
*Note: Set a time when a brief interruption is most convenient like 3am.*

- Click Set Reset SP PRO Schedule.

The SP PRO is now set to reset at that time and will continue to operate normally.

- Click Close SP PRO Firmware Update Window.

At the Scheduled time, the SP PRO will reset, appear off for 3 minutes and resume operation prior to being reset.

Firmware Update is now complete

+61 3 9727 6600  
sales@selectronic.com.au  
www.selectronic.com.au